



①

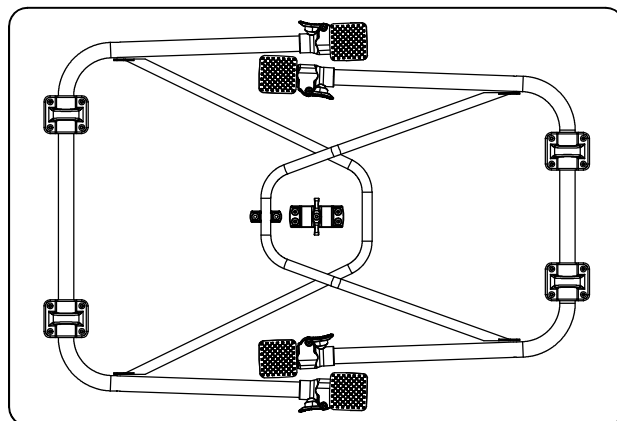


②

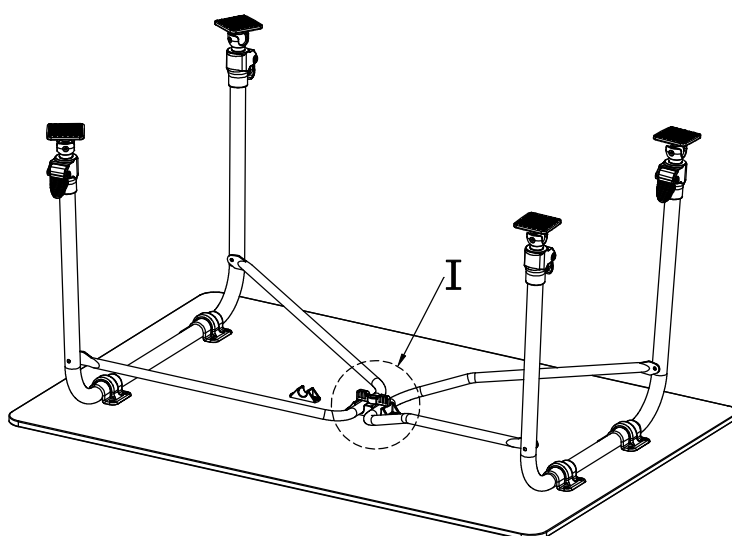

I

③

Attention:
1. Press down button when
adjusting legs.
2. Switch telescopic leg
slightly if stuck.

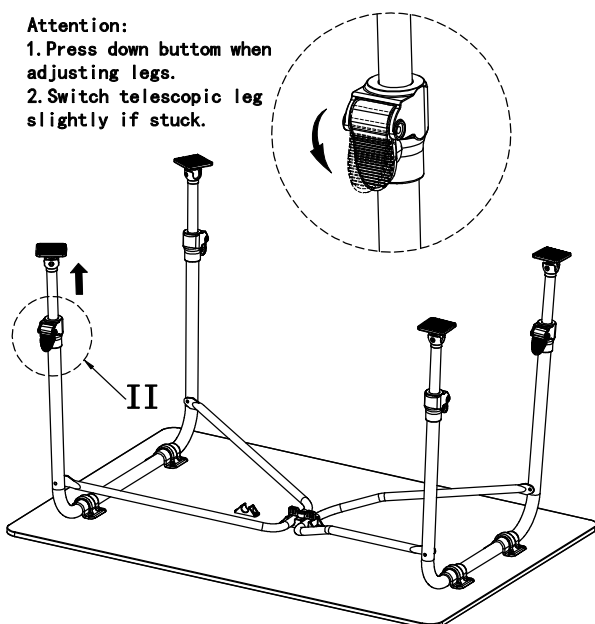

II

④

